



Spare parts

PARTS LDS-5016

KEY Nr.	Item code	Item (descr.english)
1	392571	SPRING,MAIN VALVE
2	615357	O-RING
3	615145	O-RING
4	615381	VALVE
5	615372	O-RING
6	615366	O-RING
7	615382	RING,MAIN VALVE
8	392503	O-RING
9	392507	GASKET,O-RING
10	615380	PISTON
11	615371	RING,PISTON
12	392522	PIN,PISTON
13	615375	DRIVER BLADE (LDS-5016)
14	615167	CYLINDER
15	615369	O-RING
16	392543	BUMPER
17	392516	SCREW
18	615153	WASHER
19	615147	SCREW
20	615388	NOSE PLATE LDS5016&5020
21	615189	NOSE PLATE,BACK
22	615148	SCREW
23	615378	BAFFLE
24	392546	GASKET,EXHAUST
25	615376	HEAD
26	615379	GASKET
27	615374	BODY
28	615373	BALL,TRIGGER VALVE
29	615389	SPRING,TRIGGER PLUNGER
30	615179	PLUNGER,TRIGGER
31	392501	O-RING
32	392502	O-RING
33	615180	BODY,TRIGGER
34	615144	O-RING
35	615377	SILENCER
36	392521	RING,RETAINING TRIGGER PIN
37	392564	TRIGGER
38	392562	PIN
39	392514	SCREW
40	392513	SCREW
41	615384	MAGAZINE SUPPORT
42	392553	PUSHER
43	392574	SPRING,PUSHER
44	615383	MAGAZINE
45	615386	LATCH,RAIL
46	615181	RAIL ASSY.
47	615387	SPRING,LATCH RAIL
48	615385	BUSHING,LATCH PIN
50	615370	O-RING,KIT (LDS-5016)
51	615637	SPRING
52	615638	TRIGER
53	615639	PIN

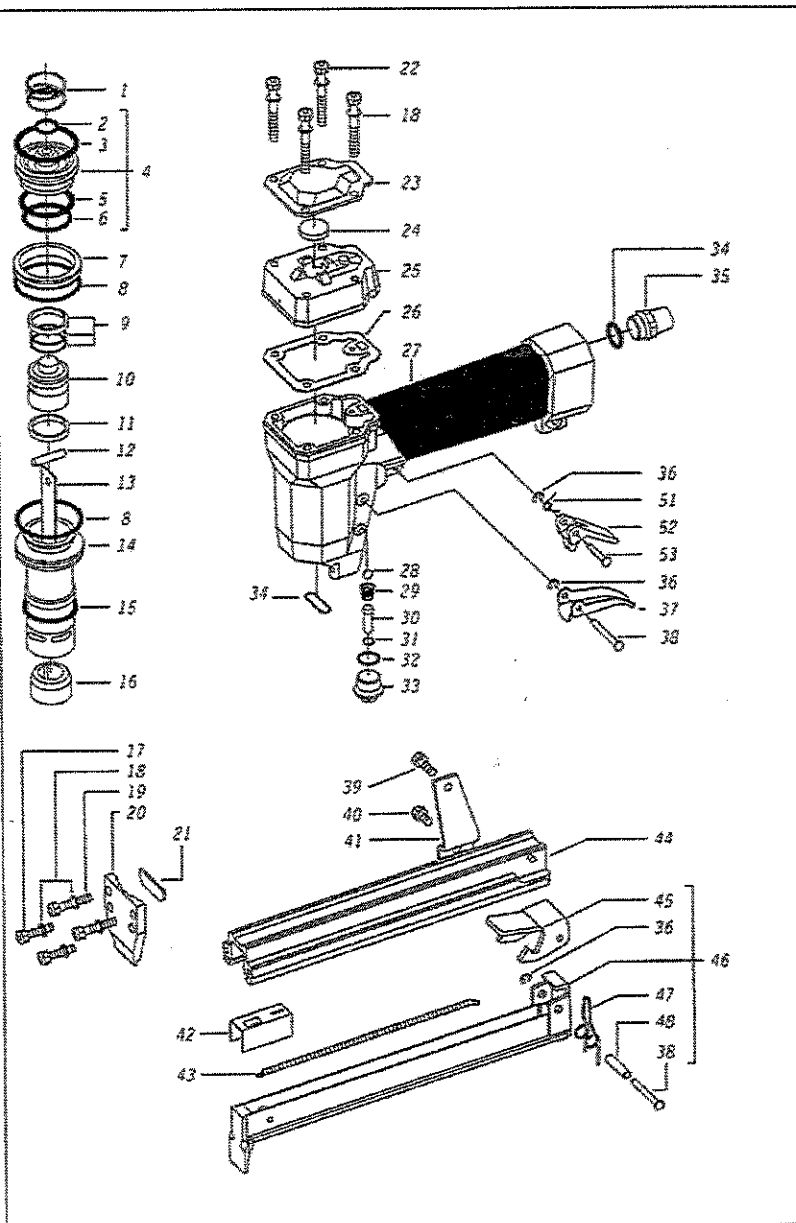

O-Rings

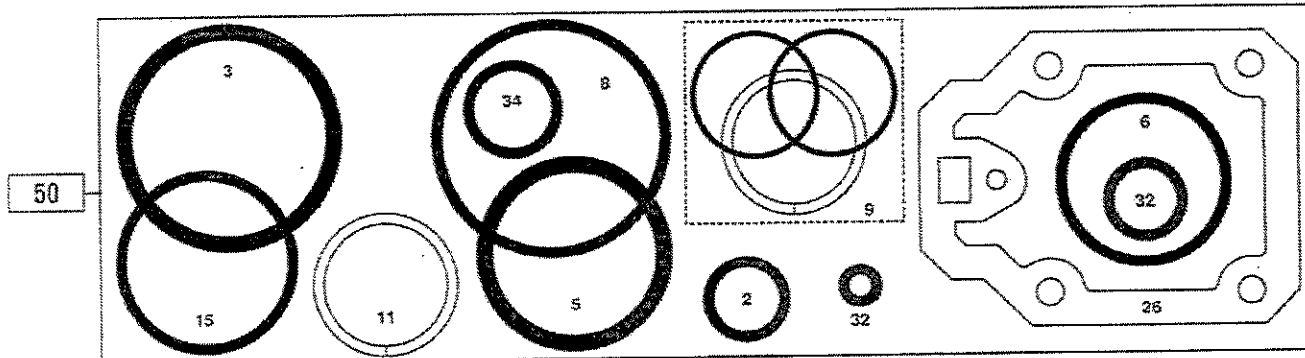

1146708 810_LDS5016_8 021100

model: LDS5016