



Teileliste BOSTITCH BRT-160

Pos.	Teilenummer	Bezeichnung
1	9R196781	BOLT
2	7BUSB-3103001	ASSEMBLY, CAP
3	1135S-0350001	GROMMET
4	2040104-03010	HEX.SOC.HD.SCREW
5	11397-1034702	GUIDE, COVER
6	11302-1034701	CYLINDER CAP SEAL
7	11370-1030001	SEAL
8	11360-1030001	COMPRESSION SPRING
9	2041108-06050	O-RING
10	11381-1030001	WASHER
11	11368-1030001	HD VALVE PISTON
12	2041108-07050	O-RING
13	2041100-06011	O-RING
14	9R196782	PISTON SA
15	11399-1030001	COLLAR
16	9R196783	CYLINDER
17	9R196784	SPACER
18	2041104-11010	O-RING
19	2041108-07060	O-RING
20	11327-1034702	BUMPER- A
21	2040101-03050	BOLT
22	11371-1034701	DEFLECTOR
23	1132T-1030001	MUFFLER
24	11327-1034703	BUMPER-B
25	9R196787	BODY
26	1135R-1034701	PROTECTIVE CUSHION
27	11226-1450001	VALVES & SEALS KIT
29	11224-1455201	TRIGGER
30	9R196803	PIN
31	2040401-05120-0	PIN
33	11230-1458001	HOUSING
34	9R196806	O RING
35	9R196807	END CAP
36	9R196808	PLUG
37	2041104-08020	O-RING
38	9R196809	NOSE
39	MSC10150-30	SCREW, SHCS M10X1.50X30 LG.
40	9R196810	GUIDE ROD
41	9R196811	BOLT
42	9R196812	GUIDE

Pos.	Teilenummer	Bezeichnung
43	9R196813	PAD
44	9R196814	MAGAZINE
45	9R196815	BOLT
46	2040202-04010	FLAT WASHER
47	9R196816	SEAL
48	2040501-04010	CAP, BOLT
49	9R196817	BRACKET
50	9R196818	BOLT
51	9R196819	SPRING GUIDE
52	9R196820	ROLLER
53	9R196821	ROLLPIN
54	9R196822	BRACKET
55	9R196823	BEARING
56	2040501-03040	NUT
57	9R196825	BUSHING
58	9R196826	WASHER
59	9R196827	BOLT
60	9R196828	SPRING
61	9R196829	WASHER
62	9R196830	LATCH
63	9R196831	BUMPER
64	9R196832	SPACER
65	BB40432	BOLT
66	9R196833	BOLT
67	9R196834	SPACER
68	9R196835	BOLT
69	9R196836	INSERT
70	9R196837	COVER
71	N70145	GUIDE,ARM
72	9R196838	ROD
73	9R196839	SPRING
74	9R196840	BRACKET
75	9R196841	BRACKET
76	MSB6100-12	SCREW,SBHCS,M6X1.00X12
77	9R196842	BUMPER
78	1135G-1114701	RUBBER PAD
79	1120K-1114701	SECOND HANDLE BASE (KIT)
80	9R196844	HANDLE
81	9R196845	GUARD